HECH



G4K







- Foot pad 8 Stand Magnetic dongle storage 9 10 Power switch Connection mode switch
- Charging: flashes slowly
 Low battery: flashes rapidly
 Normal use/fully charged: steady lit
- Scroll wheel
 Side press to adjust the volume level/light brightness
- - What's in the box?
- Ø System switch(MAC/WIN)
- Note:

 Images are for illustrative purposes only and may differ from the actual product.

 For the need of technical improvement and system upgrade, information and specifications contained herein may be slightly different from actual product. If any difference is found, the actual product prevails.

----Keyboard





USB adapter





Keycap puller









Installation of the customization software

Operating instructions

 Please log in HECATE homepage website: www.hecategaming.com to download software of G4K, find the "setup.exe" file, and install the HECATE software (not compatible with Mac system);
Please follow the instructions to complete the installation.

0

"•⇔" Wired mode

"* Bluetooth mode



Press and hold Fn and 4\$ for pairing if not connected to 2.4GHz mode.

2

3

Fn+1!

Hot keys Fn+F1

Fn+F2

Fn+F3

Fn+F4

3 System switch

2 Connection

mode switch

- . Press and hold Fn and 1! for pairing, which supports up to 3 Bluetooth devices at the same time. "WIN" Windows system
 "MAC" Mac system

• Connect the USB-C cable to the keyboard.

Bluetooth 2: Press to reconnect pair, "2@" key will flash rapidly. Bluetooth 3: Press to reconnect, "3#" key will flash slowly; Press and hold for 3s to

This P

Em

Browser hom

pair, "1!" key will flash rapidly.

Shortcut description | Key combinations

Fn+3#	pair, "3#" key will flash rapidly.
Fn+4\$	2.4GHz mode: Press to reconnect; Press and hold for 3s to pair.
Fn	Press the "Fn" key, the corresponding number key will light up to indicate the current connection mode. Bluetooth mode: "11", "20" and "3#" keys light up; 2.4GHz mode: "4\$" key lights up; Wired mode: "5%" key lights up;
Fn+Space	Check battery level: "1!"-"0)" means battery level from 10% to 100%
Fn+PrtSc	Light effects switch
Fn+Del	Light colors switch: Default seven colors: red, orange, yellow, green, cyan, blue, purple and white in turn
Fn+Esc	Press and hold for 5s to factory reset
Fn+Win	Win lock
Fn+Ins	Logo indicator switch
Fn+"↑"	Keyboard backlight brightness+
Fn+"↓"	Keyboard backlight brightness-
Fn+"←"	Keyboard backlight speed-
Fn+"→"	Keyboard backlight speed+

Single key

F2

F3

F4

Mac syste

Display brightness Display brightness

Task center

Bluetooth 1: Press to reconnect, "1!" key will flash slowly; Press and hold for 3s to

nect, "2@" key will flash slowly; Press and hold for 3s to

Search / Fn+F5 Calculator F5 Media player Fn+F6 F6 Previous track Previous track Fn+F7 F7 Pause/play Pause/play Fn+F8 F8 Fn+F9 Next track F9 Next track Fn+F10 Mute F10 Mute Volume down Volume down Fn+F11 F11 Fn+F12 Volume up F12 Volume up Note:
"7"="Home"; "9"="PgUp"; "3"="PgDn"; "1"="End" (Effective when pressing "Num" to disable the number keypad lock.) Win Alt Alt Command

@hecateglobal

@hecate_global

Model: EDF703001

Edifier International Limited P.O. Box 6264 General Post Office Hong Kong www.edifier.com © 2023 Edifier International Limited. All rights reserved. Printed in China

www.hecategaming.com
Designed by DONGGUAN EDIFIER ESPORTS TECHNOLOGY CO., LTD.

NOTICE:

For the need of technical improvement and system upgrade, information contained herein may be subject to change from time to time without prior notice.

Products of EDIFIER will be customized for different applications. Pictures and illustrations shown on this manual may be slightly different from actual product. If any difference is found, the actual product prevails.

For more information, please visit our website:

www.edifier.com